



# MULTIPAGE SPECIFICATIONS

## On-Premise Paging

### Features


The MultiPage Transmitter can be used to transmit to the following receivers: The Wireless UHF **Display** and Vibrating **Pagers**. The MultiPage LCD screen displays two lists: The first list consists of the numbers being shown on the UHF Wireless Display. The second list shows the Pagers waiting to be re-paged.



**MultiPage Transmitter**

### Operation

Simply plug the power adapter into the back of the MultiPage and it is ready to use. To enter a number on the Wireless UHF Display, type the number and press "**ENTER**." To send a page to a Vibrating Pager, type the number of the Pager you wish to page and press "**SEND**," then follow the on-screen prompts. To remove numbers from the Wireless UHF Display, press "**CANCEL**," then type the number you want to remove and then press "**ENTER**." To remove numbers from the vibrating re-paging queue, press "**CANCEL**," then type the Pager number followed by "**SEND**."

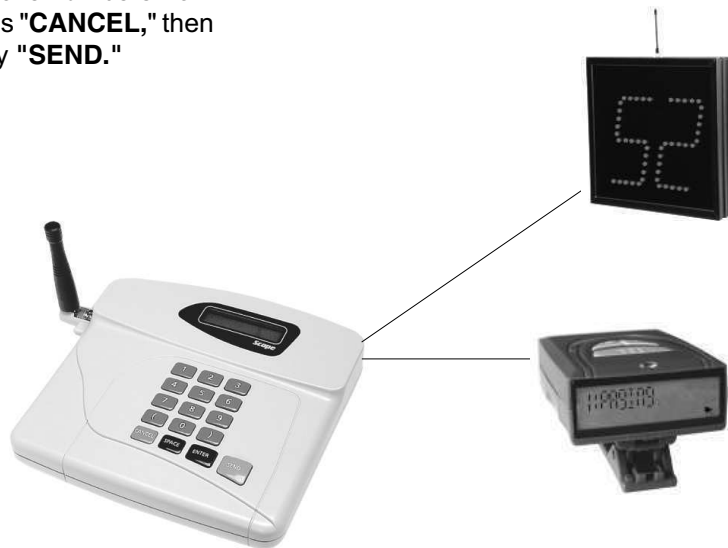

### MultiPage Specifications

Dimensions.....	9" x 7.25" x 1.75"
Frequency.....	457.575 MHz
TX Baud Rate.....	512 or 1200
Distance Range.....	1/4 to 1/2 Mile Indoors
FCC Approval No.....	JRNUSASERILINK
Mounting.....	Flat surface
Maximum Numbers shown on Display.....	20
Maximum Pagers in Re-Page Queue.....	30
Auto Delete Time.....	0-25 minutes(user-selectable)
Roll Over Time.....	0-9 seconds (user-selectable)

**Support and Sales**  
**800-635-3811**

Microframe® Corporation  
[www.microframecorp.com](http://www.microframecorp.com)

PO Box 1700  
 Broken Arrow, OK 74013